



Changing MCare2 Accessories

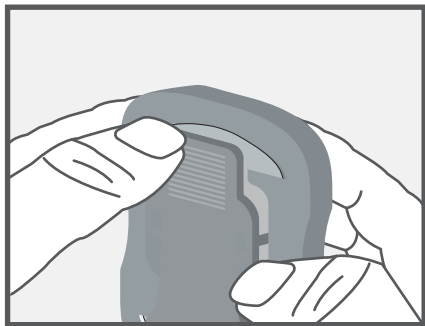

Remove the old attachment.

Pull the top of the attachment outwards and push down to remove it.

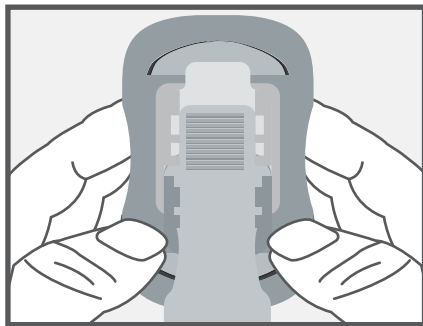

Align the new attachment.

Align the new attachment at the bottom of the device and line up the grooves.



Snap the new attachment into place.

Push the new attachment up until you feel it snap in place.