


# Meet Your New PERS

## Linear2400 Emergency Response System

Linear2400 was created to provide you comfort, reassurance & peace of mind by making it possible for help to be just a touch of a button away. The Linear2400 was designed to be easy to install and easy to maintain.

### Get to Know Your Unit

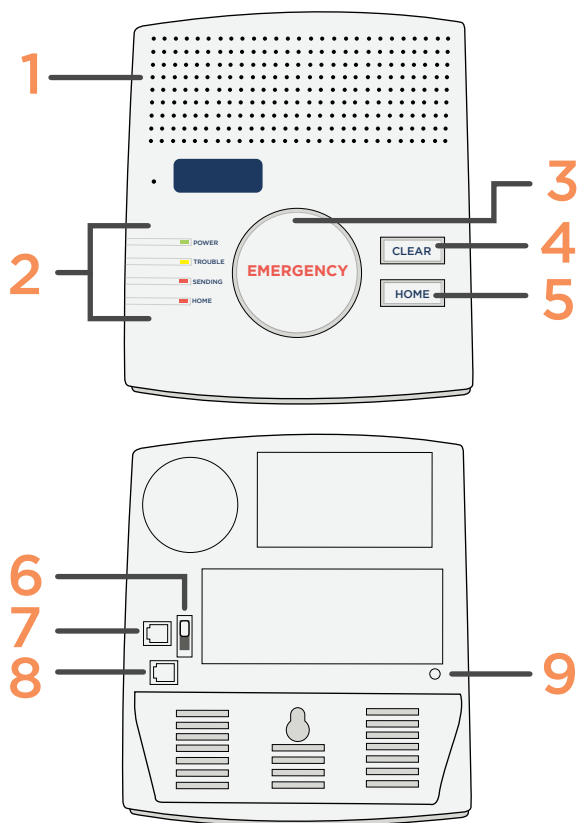

- 1 Speaker/Mic**  
Used to talk to the Care Center
- 2 Status Lights**  
Displays the current status of the unit
- 3 Help Button**  
Press to call the Care Center (works just like the button)
- 4 Clear Button**  
Press to stop alarms
- 5 Home Button**  
Press to reset activity timer
- 6 Power Switch**  
Flip to turn your unit on or off
- 7 Wall Jack**  
Used to connect your wall jack, or router
- 8 Phone Jack**  
Used to connect your home phone to the unit
- 9 Range Test Button**  
Used to test the button range around the residence

### 2400 Facts & Features:

- ◆ The 2400 is compatible with standard phone lines
  - ◆ The button can be worn around your wrist or neck like a necklace
  - ◆ The button has a range of up to 600 feet, (average 3-5 year battery life), and is water resistant
  - ◆ Care Center monitors unit's battery status
  - ◆ 32+ hours of back up battery in case of AC power loss
  - ◆ Status Lights by Color
    - **Power Solid Green-** Unit has household power
    - **Power Flashing Green (Slowly)-** back up battery is charging
    - **Power Flashing Green (Quickly)-** AC power is not available, unit is running on back up battery
  - **Home (ON)-** Lights when activity timer is on
  - **Home Red (Blinks)-** When activity timer has less than 15 minutes left or has expired
  - **Sending Red (Flashing)-** Unit is trying to call the Care Center
  - **Trouble Yellow-** Low battery detected on your button
- ◆ For additional questions, call tech support at **1-800-860-4230**